














Disassemble the building components of the original nut of the antenna.





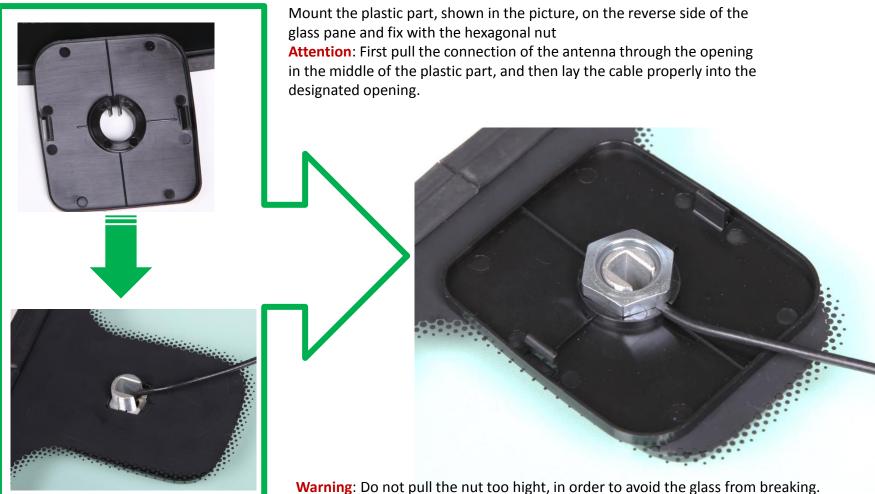





Press the plastic part shown in the picture, until the hooks have properly clieked into on both sides.





## Finished

